

Manual

AVIDSEN 104700, 104250 OLD, 104250 RED, 104250 BRICO, 104257 and 654250

CODING THE REMOTE CONTROL:

FOR OPENING / CLOSING OF 2 WINGS:

- 1) Press and release the RX button. The LED Ld1 lights up.
- 2) Wait 5 seconds, the LED Ld1 turns off.
- 3) Press a button on the remote, the LED Ld2 lights up. The system is ready to operate.



FOR OPENING / CLOSING OF PEDESTRIAN ENTRY (1 WING)

- 1) Press and release the RX button. The LED Ld1 lights up.
- 2) Press a second time on the RX button then release. The LED Ld1 turns off.
- 3) Press another button on the remote control, the LED Ld2 lights up. The system is ready to operate.

Note:

If the system does not receive a code from the remote control within 10 seconds, the LED Ld1 blinks then turns off. You can store up to 20 remotes controls.

TO DELETE ALL PROGRAMMED CODES:

Press and hold the RX button. The LED Ld1 lights up, and then turns off after 5 seconds. Release the button when the LED Ld1 turns off.

In case of malfunction, repeat the programming steps.

